

# Prelude MTS Tower



## ACOUSTIC & ELECTRICAL SPECIFICATIONS:

- Nominal Impedance 4 ohms
- Max Amp Power 500 watts
- Frequency Response 80 Hz - 22 kHz ( $\pm 3\text{dB}$ )  
100 Hz - 20 kHz ( $\pm 1.5\text{dB}$ )
- Sensitivity 90 dB (1 watt @ 1 meter)
- Crossover Frequency 80 Hz, 300 Hz, 2kHz

## SYSTEM COMPONENTS:

- Enclosure Prelude MTS Tower (Not for sale)
- Grille 335230-001
- Low Frequency Transducer (4) 5 1/4" (133mm) C.M.M. Neodymium Shielded (335223-001)  
DC Resistance 4.8 ohms  $\pm 10\%$
- Mid Frequency Transducer 4" (101mm) C.M.M. Neodymium Shielded (335224-001)  
DC Resistance 4.6 ohms  $\pm 10\%$
- High Frequency Transducer 1" (25mm) C.M.M. Neodymium Shielded (335225-001)  
DC Resistance 3.4 ohms  $\pm 10\%$
- Crossover Network 335229-001 (2pcs.)

## AURAL SWEEP TEST SPECIFICATIONS:

- A. System Aural Sweep Test 6.0V Input 80 Hz to 20 kHz
- B. L.F. Aural Sweep Test 6.0V Input 80 Hz to 500 kHz
- C. M.F. Aural Sweep Test 4.0V Input 100 Hz to 3 kHz
- D. H.F. Aural Sweep Test 2.83V Input 2 kHz to 20 kHz

## PHYSICAL SPECIFICATIONS:


- Enclosure dimensions: 37" x 6 1/2" x 7 1/2" (H x W x D)  
940mm x 165mm x 191mm
- Weight 12 lbs. /5.4kg Each

## WARRANTY:


- Refer to Warranty Statement packed with each product.

## PACKAGING


- Hardware Kit:  
Baffle Plugs 335352-001  
Screws 903001-006  
Owner's Manual 335060-002  
Warranty Card 335841-001  
Survey Card 335868-001

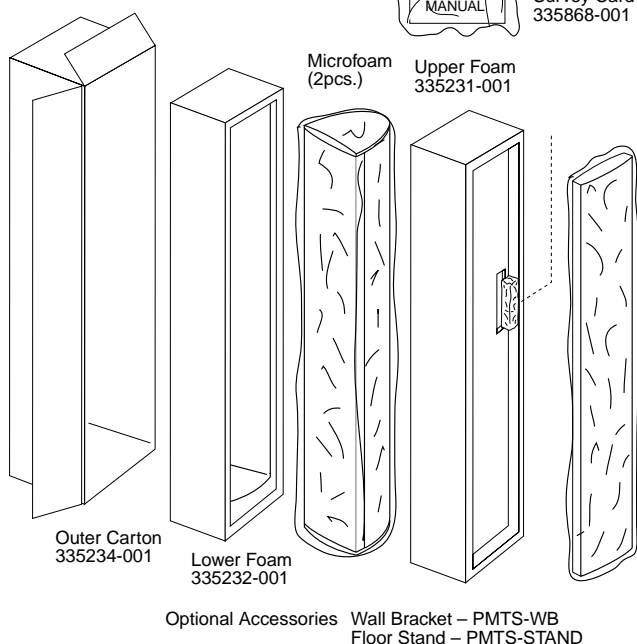

## WIRING DIAGRAM

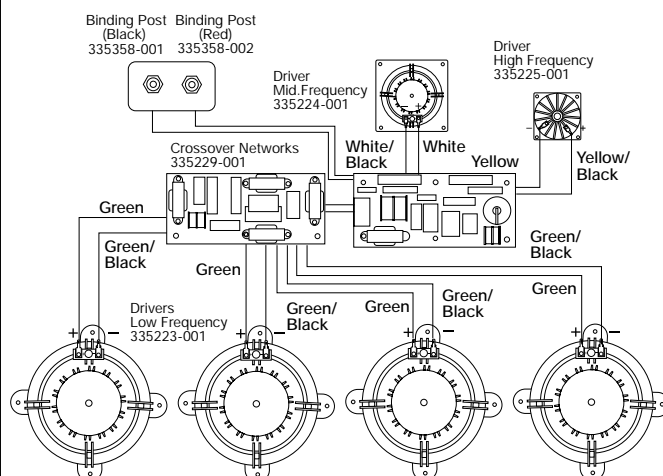


## Prelude MTS Tower Schematic

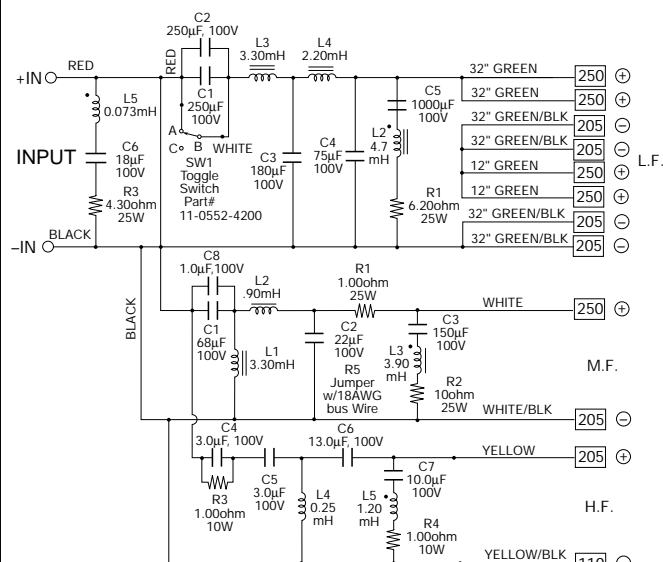

# Prelude MTS Tower



## EXPLODED VIEW

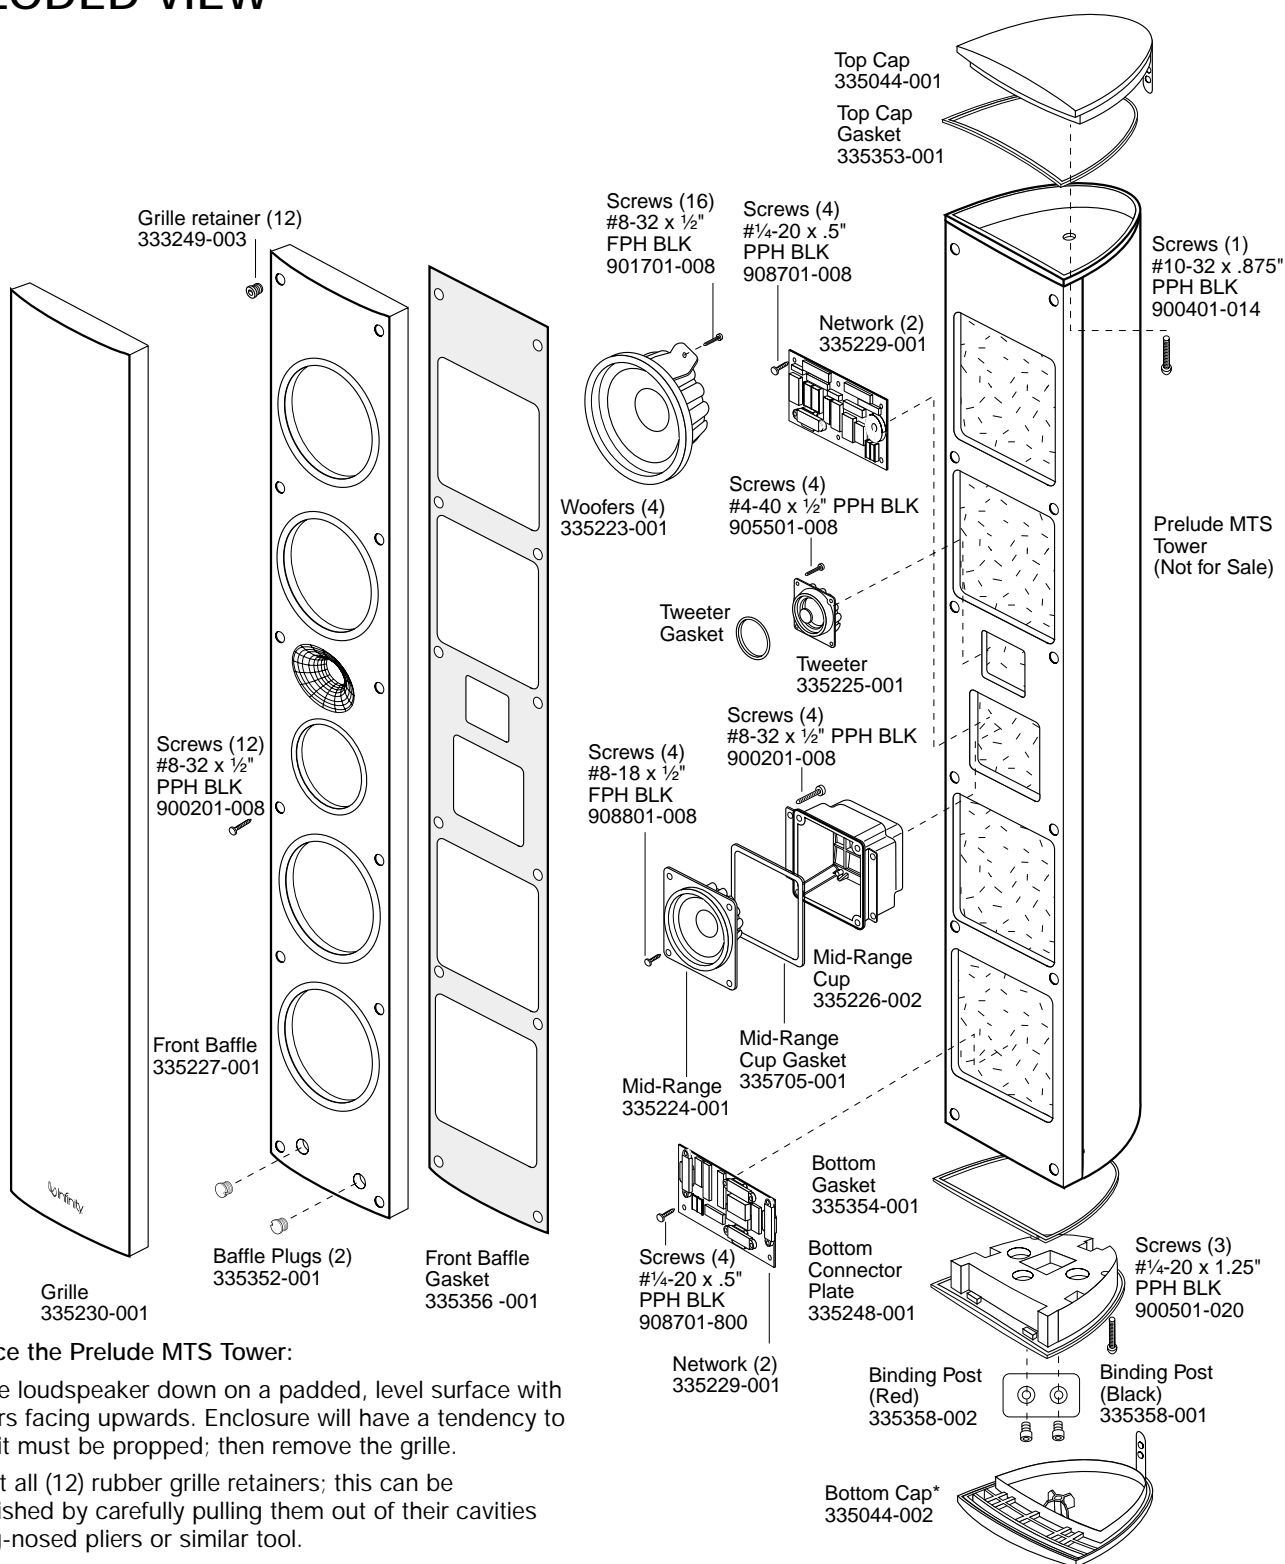

### To Service the Prelude MTS Tower:

- 1) Lay the loudspeaker down on a padded, level surface with the drivers facing upwards. Enclosure will have a tendency to "roll" so it must be propped; then remove the grille.
- 2) Extract all (12) rubber grille retainers; this can be accomplished by carefully pulling them out of their cavities with long-nosed pliers or similar tool.
- 3) Remove the (12) Philips screws that are now exposed.
- 4) Carefully lift the fully loaded baffle off the cabinet.

\* Only included in the optional wall accessory  
WALL BRACKET-PMTS-WB

Prelude MTS Tower